TIMEX®

www.timex.com

W-208

THANK YOU FOR PURCHASING YOUR TIMEX® WATCH.

Extended Warranty

Available in U.S. only. Extend your warranty for an additional 4 years from date of purchase for $5. You can pay with AMEX, Discover, Visa or MasterCard by calling 1 800-328-2677 during normal business hours. Payment must be made within 30 days of purchase. Name, address, telephone number, purchase date, and 5-digit model number required. You can also mail a check for $5 to: Timex Extended Warranty, P.O. Box 1676, Dept. EF, Little Rock, AR 72203.

Please read instructions carefully to understand how to operate your Timex® watch. CE

FEATURES

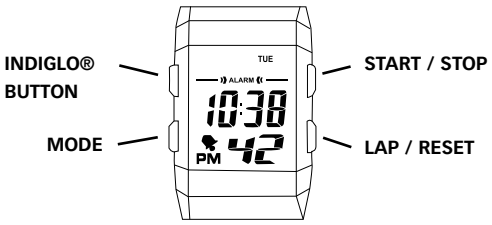

- Time with 12- or 24-hour format
- Date with MMDD or DDMM format
- Optional hourly chime
- 24-hour chronograph with split time display
- Daily alarm
- INDIGLO® night-light

TIME

To set time and date:

1) With time of day displayed, press and hold **MODE** until Monday symbol flashes. Release and press **MODE** again.
2) Tuesday symbol and seconds flash. Press **LAP/RESET** to round time up or down to nearest minute, setting seconds to zero.
3) Press **START/STOP**. Minutes flash. Press **LAP/RESET** to change minutes; hold button to scan values.
4) Press **START/STOP**. Hour flashes. Press **LAP/RESET** to change hour (including AM/PM).
5) Press **START/STOP**. Month flashes. Press **LAP/RESET** to change month.
6) Press **START/STOP**. Day flashes. Press **LAP/RESET** to change day.
7) Press **START/STOP**. Day of week flashes. Press **LAP/RESET** to change day of week.
8) Press **MODE** at any step when done setting.

To see date, press and hold **START/STOP**.

To switch between MMDD and DDMM date format, press and hold **START/STOP** and while holding, press **LAP/RESET**.

To see alarm time, press and hold **LAP/RESET**.

To switch between 12-hour and 24-hour time format, press and hold **LAP/RESET**, and while holding, press **MODE**. 12-hour format has AM/PM.

ALARM/CHIME

The watch has a daily alarm and optional hourly chime.

To set alarm:

1) With time of day displayed, press and hold **MODE** until Monday symbol flashes.
2) Monday symbol and alarm hour flash. Press **LAP/RESET** to change hour (including AM/PM); hold button to scan values.
3) Press **START/STOP**. Monday symbol and alarm minutes flash. Press **LAP/RESET** to change minutes.
4) Press **MODE** at any step when done setting. Alarm is automatically turned on.

To turn on/off alarm and hourly chime, with time of day displayed, press and hold **LAP/RESET**, and while holding, press **START/STOP** repeatedly. Watch will step through four combinations of alarm and chime settings. Alarm symbol appears when alarm is on. Bell symbol appears when hourly chime is on - watch will chime on every hour.

To test alarm, press and hold both **START/STOP** and **LAP/RESET**.

When alarm sounds, press **LAP/RESET** to silence. If button is not pressed, alarm will sound for 30 seconds.

Alarm repeats daily unless turned off.

CHRONOGRAPH

This mode provides a chronograph (stopwatch) function for timing events.

With time of day displayed, press **MODE** to go to Chronograph mode. Sunday symbol flashes.

To start, press **START/STOP**. Sunday and Saturday symbols flash. Chronograph counts up, by hundredths of a second up to one hour, then by seconds up to 24 hours before starting over. Saturday symbol stops flashing.

To stop, press **START/STOP**. Sunday, Saturday and Friday symbols flash.

To resume, press **START/STOP**, or to reset chronograph to zero, press **LAP/RESET**.

While chronograph is running, press **LAP/RESET** to take lap/split and see your time up to a particular point. Sunday, Saturday and Thursday symbols flash. Chronograph display freezes while chronograph continues to run. Press **LAP/RESET** to resume display of running chronograph.

Press **MODE** to exit mode. Chronograph continues to run if you exit mode.

INDIGLO® NIGHT-LIGHT

Press INDIGLO® to illuminate watch display for 3 seconds. Patented (U.S. pat. 4,527,096 and 4,775,964) electroluminescent technology used in the INDIGLO® night-light illuminates entire watch face at night and in low light conditions.

WATER & SHOCK RESISTANCE

If your watch is water-resistant, meter marking or (≈) is indicated.

Water-Resistance Depth	p.s.i.a.* Water Pressure Below Surface
30m/98ft	**60**
50m/164ft	**86**
100m/328ft	**160**

*pounds per square inch absolute

WARNING: TO MAINTAIN WATER-RESISTANCE, DO NOT PRESS ANY BUTTONS UNDER WATER.

1. Watch is water-resistant only as long as lens, push buttons and case remain intact.
2. Watch is not a diver watch and should not be used for diving.
3. Rinse watch with fresh water after exposure to salt water.
4. Shock-resistance will be indicated on watch face or caseback. Watches are designed to pass ISO test for shock-resistance. However, care should be taken to avoid damaging crystal/lens.

BATTERY

Timex strongly recommends that a retailer or jeweler replace battery. Battery type is on watch back. If present, push/short internal reset switch after replacing battery. Battery life estimates are based on certain assumptions regarding usage; battery life may vary depending on actual usage.

DO NOT DISPOSE OF BATTERY IN FIRE. DO NOT RECHARGE. KEEP LOOSE BATTERIES AWAY FROM CHILDREN.

TIMEX INTERNATIONAL WARRANTY

(U.S. – LIMITED WARRANTY – PLEASE SEE FRONT OF INSTRUCTION BOOKLET FOR TERMS OF EXTENDED WARRANTY OFFER)

Your TIMEX® watch is warranted against manufacturing defects by Timex Corporation for a period of ONE YEAR from the original purchase date. Timex and its worldwide affiliates will honor this International Warranty.

Please note that Timex may, at its option, repair your watch by installing new or thoroughly reconditioned and inspected components or replace it with an identical or similar model. **IMPORTANT — PLEASE NOTE THAT THIS WARRANTY DOES NOT COVER DEFECTS OR DAMAGES TO YOUR WATCH:**

1) after the warranty period expires;
2) if the watch was not originally purchased from an authorized Timex retailer;
3) from repair services not performed by Timex;
4) from accidents, tampering or abuse; and
5) lens or crystal, strap or band, watch case, attachments or battery. Timex may charge you for replacing any of these parts.

THIS WARRANTY AND THE REMEDIES CONTAINED HEREIN ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSE. TIMEX IS NOT LIABLE FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some countries and states do not allow limitations on implied warranties and do not allow exclusions or limitations on damages, so these limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from country to country and state to state.

To obtain warranty service, please return your watch to Timex, one of its affiliates or the Timex retailer where the watch was purchased, together with a completed original Watch Repair Coupon or, in the U.S. and Canada only, the completed original Watch Repair Coupon or a written statement identifying your name, address, telephone number and date and place of purchase. Please include the following with your watch to cover postage and handling (this is not a repair charge): a US$ 7.00 check or money order in the U.S.; a CAN$6.00 cheque or money order in Canada; and a UK£2.50 cheque or money order in the U.K. In other countries, Timex will charge you for postage and handling. NEVER INCLUDE A SPECIAL WATCHBAND OR ANY OTHER ARTICLE OF PERSONAL VALUE IN YOUR SHIPMENT.

For the U.S., please call 1-800-328-2677 for additional warranty information. For Canada, call 1-800-263-0981. For Brazil, call 0800-168787. For Mexico, call 01-800-01-060-00. For Central America, the Caribbean, Bermuda and the Bahamas, call (501) 370-5775 (U.S.). For Asia, call 852-2815-0091. For the U.K., call 44 020 8687 9620. For Portugal, call 351 212 946 017. For France, call 33 3 81 63 42 00. For Germany, call 49 7 231 494140. For the Middle East and Africa, call 971-4-310850. For other areas, please contact your local Timex retailer or Timex distributor for warranty information. In Canada, the U.S. and in certain other locations, participating Timex retailers can provide you with a postage-paid, pre-addressed Watch Repair Mailer for your convenience in obtaining factory service.

©2005 Timex Corporation. Timex is a registered trademark of timex corporation. INDIGLO is a registered trademark of Indiglo Corporation in the US. and other countries.